



8 FM antenna (Select models only)

FM signal to computer
调频天线（仅适用于部分型号）
将调频信号接入电脑

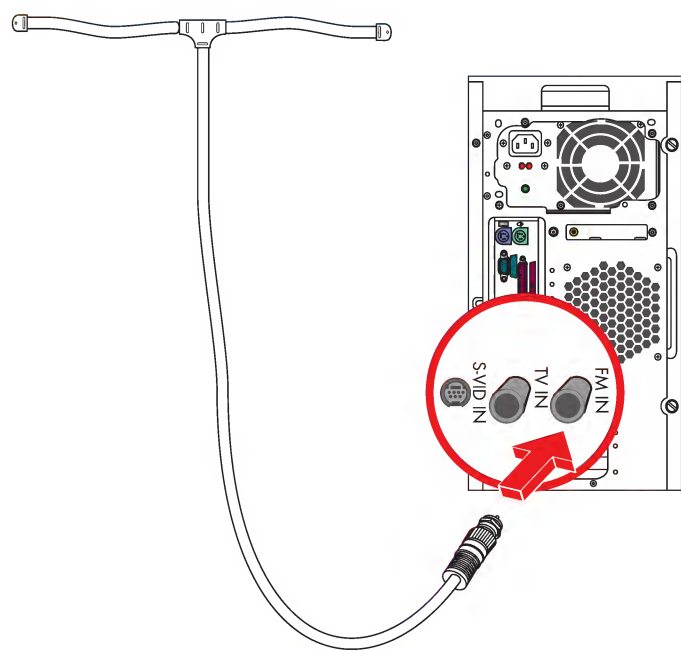


9 Power Connection

Computer to electrical outlet
Grounded connection or connection to surge protector is recommended.
连接电源
将电脑连接到电源插座
建议接地或连接电源保护器。

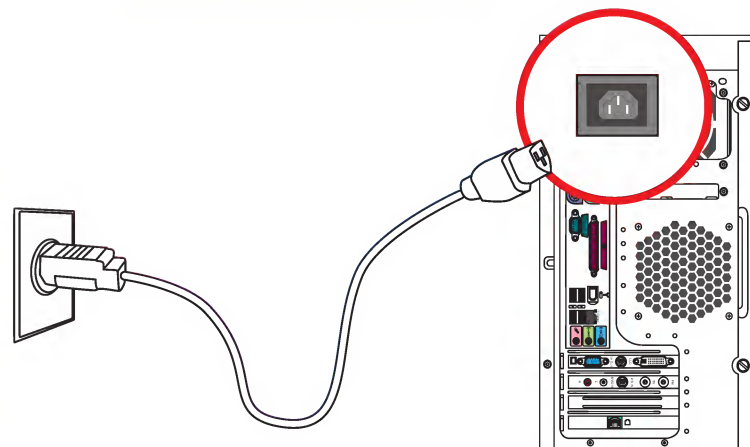

10 Modem (Select models only)


调制解调器（仅适用于部分型号）

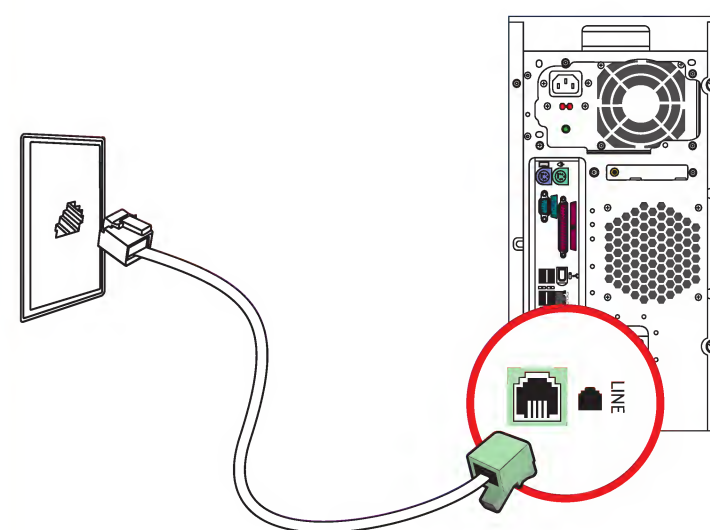

Connect modem cable to computer.
将调制解调器电缆连接到电脑。


11 Power On

开机

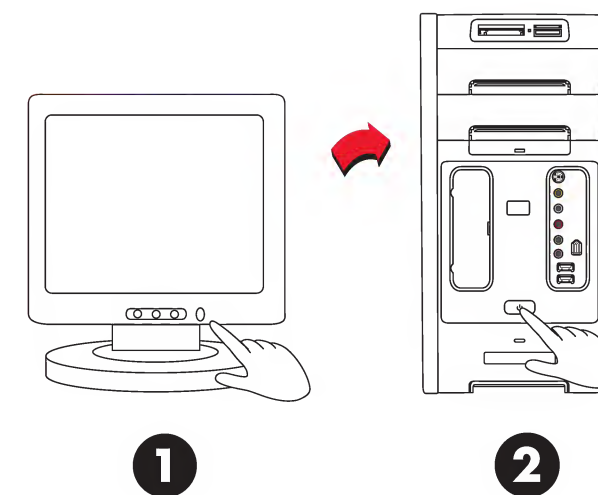

First turn on monitor, then computer.
先打开显示器，再打开电脑。

Your PC may look different from the ones shown here. Component, connector location, type, and number vary by model.
您的电脑外观可能与此处图示有所不同。电脑中的组件、接口的位置、类型和数目会因型号而异。

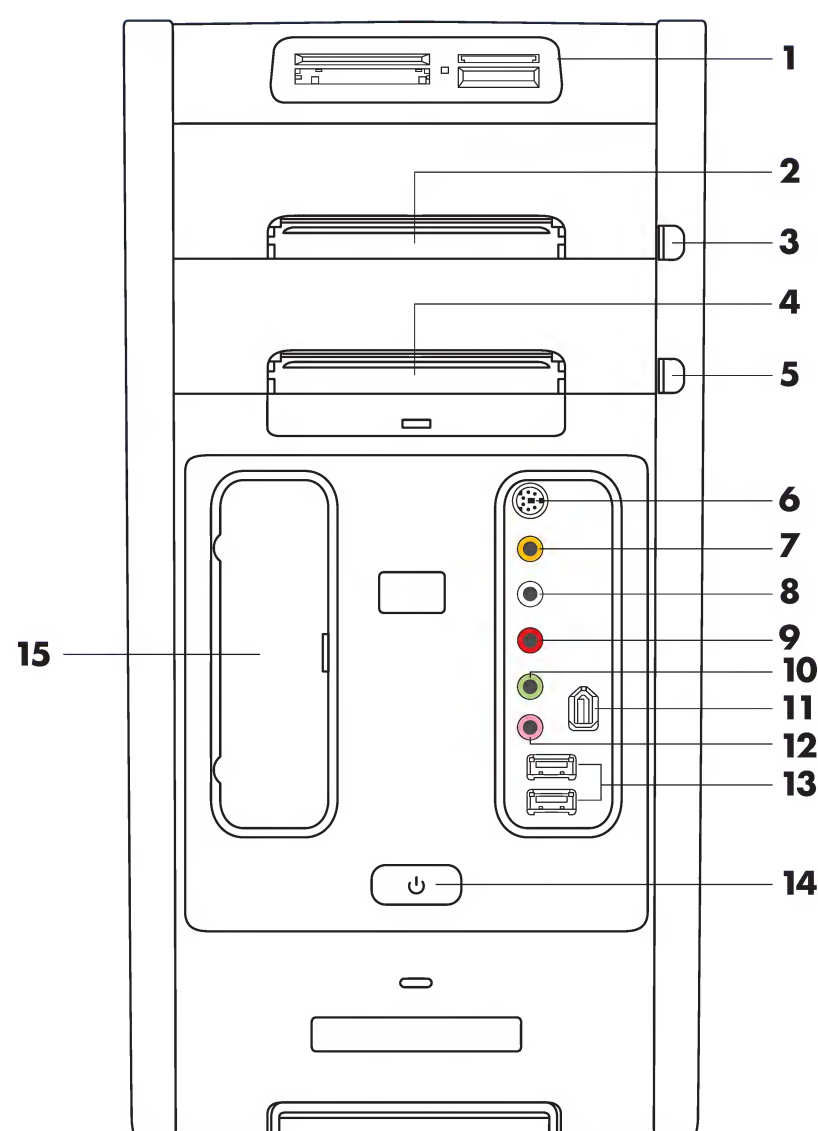

- 1 — Memory Card Reader
 - 2 — Optical drive 1
 - 3 — 1st Optical drive Eject button
 - 4 — Optical drive 2
 - 5 — 2nd Optical drive Eject button
 - 6 — S-video In
 - 7 — Composite Video In
 - 8 — Left Audio In
 - 9 — Right Audio In
 - 10 — Headphone (Audio Line Out)
 - 11 — FireWire (IEEE 1394) port
 - 12 — Microphone
 - 13 — USB 2.0 ports
 - 14 — On button/indicator
 - 15 — HP Personal Media Drive bay
-
- 1 — 读卡器
 - 2 — 光驱 1
 - 3 — 光驱 1 弹出按钮
 - 4 — 光驱 2
 - 5 — 光驱 2 弹出按钮
 - 6 — S-video 输入
 - 7 — 复合视频输入
 - 8 — 左声道输入
 - 9 — 右声道输入
 - 10 — 耳机（音频线路输出）
 - 11 — FireWire (IEEE 1394) 接口
 - 12 — 麦克风
 - 13 — USB 2.0 接口
 - 14 — 主机开关按钮/指示灯
 - 15 — HP Personal Media Drive 托架


China only — 仅适用于中国

激活 Windows XP

您必须在试用期内激活 Windows XP，否则，试用期结束后将无法继续使用 Windows XP。
您可以通过 Internet 或电话激活 Windows XP。激活 Windows XP 的方法是：

- 1 单击“开始”，选择“所有程序”，然后单击“激活 Windows”。
- 2 按屏幕上的说明进行操作。您必须输入电脑的 Windows XP 标签上的 25 位产品密钥号。

注意：执行“系统复原”或“系统还原”之后，必须重新激活 Windows XP。

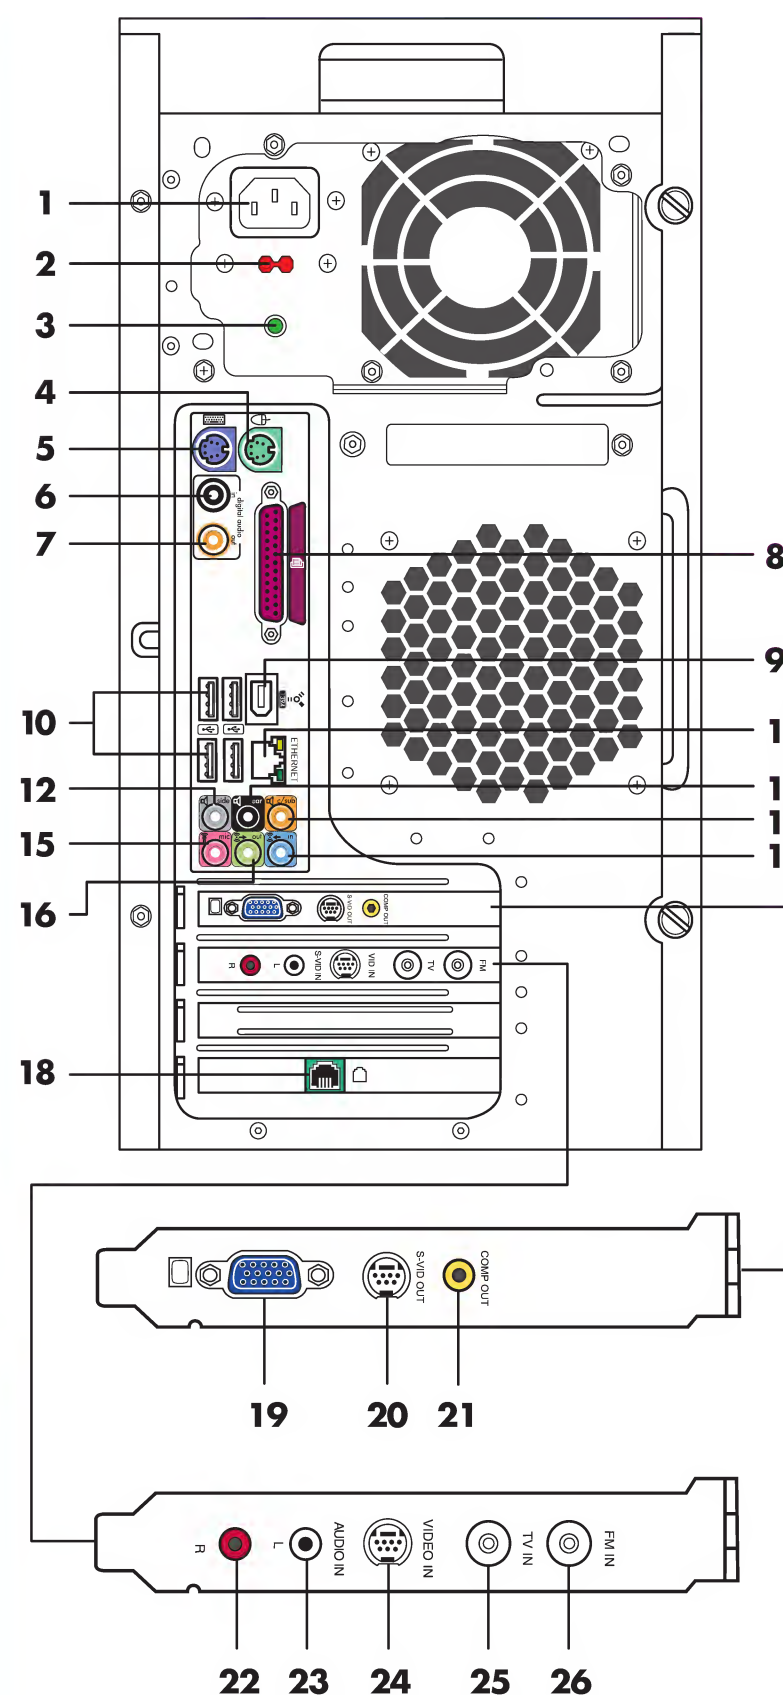

- 1 — Power Cord connector
 - 2 — Voltage selector
 - 3 — Power LED
 - 4 — PS/2 Mouse connector
 - 5 — PS/2 Keyboard connector
 - 6 — Digital Audio In
 - 7 — Digital Audio Out
 - 8 — Parallel port
 - 9 — FireWire (IEEE 1394) port
 - 10 — 4 USB 2.0 ports
 - 11 — LAN (Ethernet)
 - 12 — Side speaker port
 - 13 — Rear speaker port
 - 14 — Center speaker/subwoofer port
 - 15 — Microphone connector
 - 16 — Audio Line Out
 - 17 — Audio Line In
 - 18 — Modem (Line In RJ-11)
(select models only)
 - 19 — VGA monitor port
 - 20 — S-video (TV Out)
 - 21 — Composite Video (TV Out)
 - 22 — Right Audio In
 - 23 — Left Audio In
 - 24 — S-video In
 - 25 — TV/RF-In antenna/Cable connector
 - 26 — FM-In radio antenna connector
(select models only)
-
- 1 — 电源线接口
 - 2 — 电压选择器
 - 3 — 电源 LED 指示灯
 - 4 — PS/2 鼠标接口
 - 5 — PS/2 键盘接口
 - 6 — 数字音频输入
 - 7 — 数字音频输出
 - 8 — 并口
 - 9 — FireWire (IEEE 1394) 接口
 - 10 — USB 2.0 接口（4 个）
 - 11 — LAN（以太网接口）
 - 12 — 旁置扬声器接口
 - 13 — 后置扬声器接口
 - 14 — 中置扬声器/低音炮接口
 - 15 — 麦克风接口
 - 16 — 音频线路输出
 - 17 — 音频线路输入
 - 18 — 调制解调器（RJ-11 线路输入）
（仅适用于部分型号）
 - 19 — VGA 显示器接口
 - 20 — S-video（电视输出）
 - 21 — 复合视频（电视输出）
 - 22 — 右声道输入
 - 23 — 左声道输入
 - 24 — S-video 输入
 - 25 — TV/RF-In 天线/电缆接口
 - 26 — FM-In 收音机天线接口
（仅适用于部分型号）